



Model: DG-108F3M



Before performing the connection, make sure that the ratings correspond to the power supply voltage

DONG GU ELECTRONICS. CO.LTD.

Main Office: 500-5, Sangdaewon-Dong, Jungwon-Ku, Sungnam-City, Kyungki-Do, Korea TEL: 82-31-731-3600 FAX: 82-31-733-1155 Email: info@venusta.net http://www.venusta.net

Features

Refined design As the best beautiful vending machine with european style, it show at the best advantage in any places.

Mountable water bottle Water bottle can be mounted on top of the cabinet to remove inconvenience to supply water appropriately.

Individual cup use for environment protection

> Mug cup use function as a substitute paper cup is realized environment protection reduce by one time cup use.

Easy & convenient connection of canister

introduce of Canister Gear connector system

Automatic Micom System

The micom system ca be control every function, as you press button.

Various menu choice for vour taste

> Customers can select 1,100kind of tastes by adjusting the volume of raw materials and the amount of the water.

Various temperature adjustment system for your taste control.

> You can enjoy various taste by easy temperature adjustment controller.

Contents

Before using

Clean the product completely


Clean inside, outside and raw material barrel completely.



Put water gutter on the specified position

Establish the product on the flat place with 10cm distance from the wall

· It may cause any noise if installing on the unflat place

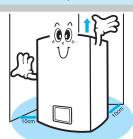

Check the make sure to use the product with 220vol. (option) exclusive power supply

- This product is a 220V(option) exclusive product(Above 2kw of rated capacity)
- Use ground-adapted electric outlet
- necessarily (All of the power supply of this product are grounded)





Spare fuse

(1 Piece)

Do not connect multiple plugs of appliances to one outlet at the same time Do not connect electrical plug to loose electrical outlet.

It might cause fire.







Stop operation when the plug and outlet is damaged

- It might cause Electrical shock or fire.
- Be sure to call your local A/S service

team to repair it.







(2Piece)



Quality certy.



STICKER



Raw material container



gutter





Coin custody box

Water tank adapter

Description of each section

Water tank

Canister(1.2.3)

Controller

Cleaning button

Cup test button

Fixing device

Drink outlet

Mixing bowl


Water gutter

The front side


Internal View

3




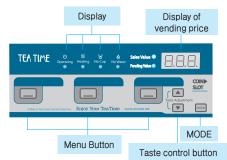

Inside the door

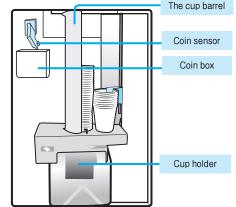

The rear side

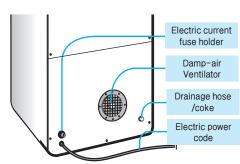

How to supply water



How to supply water (INSIDE WATER TANK USING ONLY)

Open the lid of the water tank by twisting the arrow direction as indicated.




Put the water in to the tank using a big kettle



- Supply the water to reach 3cm distance from the top of the water tank.
- If the water overflows or gets into the assembly, it may cause the defect of the machine.



How to supply materials

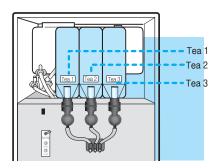

You can prepare the following materials

		Available	Unavailable		
	Coffee Material	Premix coffee(Cafe Latte, Cappuccino, CafeMoca,etc) Freshbrew coffee(Linger)	Liquid type cream		
	Tea Material	Citron/Tea Cocoa, Powder Milk Ginseng tea, Choco	Containedgrain tea soup, stew (stickymaterial)		

Disassemble the material barrels at first

Lift the funnel and take out.


Take out the barrel by lifting the front side of it slightly
Disassemble in the following from left(Tea1) to right(Tea2)





■ The maximum volume of the material containers is 1,600g


How to cup test

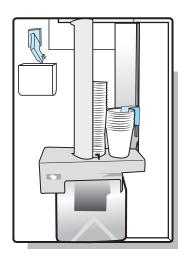

Put into cup barrel/Cup test method


Put the paper cups into cup bucket.

  Put 5~10 cups each time into the barrel for cup sensor to operate moderately



Press the cup test button.

  You can see the paper cup comes out through the outlet with beep sound





- Do not use substandard ,distorted, deformed or wet cups.
- Do not press the cups to put more cups into the barrel.

May cause the cup sensor be out of order.



standard type)

If the cups are not placed straightly

 If the cups are not placed straightly into the barrel, beat or tap with hand 2 or 3 times upward lightly



• How to assemble barrels, and supply materials

Close the lid after putting the raw materials into the container

 
• When putting raw materials, incline the barrel slightly backward for the materials not to get



Fix the fixing hole of barrel into the rotating shaft correctly.

- Before assembling containers, make sure that the names of the material shown in a plate adhered to barrel with those of indicating panel.
 Assemble barrels in order
- Tea2 barrel Tea1 barrel (From the left to the right)


out of the front hole of the barrel.



Put the projecting part located in the lower part of barrel into panel groove correctly.

 Put the raw material funnel into the panel hole correctly.






5

How to clean the connection tubes

When using the machine for the first time or exception the connection tubes to be clogged due to the hardened materials during operation, press the cleaning button, it will clean them automatically. The cleaning function is only available during power is on.

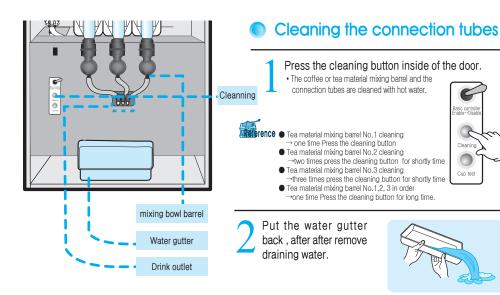


 ϵ

How to use mountable water bottle


Open the water tank on the support of the cabinet with the bottom up & put the water bottle on the tank on the support of the cabinet with the bottom up.



 This machine is (small size middle size & large size) exclusive use spring water bottle only.



 Water bottle (Middle, Large size) mountable system.



Please notice do not exchange with spring water bottle of kids or infirmity with age Be careful not pouring or flowering inside of the machine . It may cause electric shock or malfunction.

How to install and operate

This product is adjusted for the best taste at factory when it comes out. Try to make the drink be tasteful.



 
• How to set up and choose drink

First of all, supply water into the tank and put raw materials (See page 5). cup(see page 6)



Connect the electric plug to correct voltage outlet.

> · Use the outlet absolutely having been grounded.(All of power plugs of the machine are grounded)



Turn on the power switch on the right side of the machine.



· The heating lamp will be turned on after buzzer sounds three times and operating lamp will be turned on after 13minutes pass.



Press the menu button When starting to operate the machine for the first time, the

price has a factory set-up at "Free of charge "Therefore, when pressing the button, the drink will be served immediately.



Take the cup out of the cup service outlet.



When the following indication signals are displayed

- When "no cup" lamp is changed on supply cups or insert your hand into the outlet and tap 2 or 3 times upward.
- •The lamp is turned on when cups remain by almost consuming them.
- The lamp is turned on when the cups are not placed correctly.
- When "no water" lamp is changed on put the water more.
- . There may no water in tank, or little water remains.



 
How to adjust the taste control & water volume

This function can be set—up following individual taste.

Set the Enable /Disable switch in the control box inside the door to Enable



Amount indicator



Please UP or DOWN button on the front door.

Please UP or DOWN button on the front door.



Amount indicator A.2.5

Press select Drink button on the front door.



When press tea 2 button →E2.5

Setting limites of material volume: 0.0~7.5



When the water volume control, press tea1



button again.



Amount indicator n5.5

Setting limites of water volume: 0.0~9.9

When finish setting price, please return to "Disable" from "Enable" inside the door. Be keeping your changed numerical value with "beep sound"



Ref. inform.when the taste contro

- The Max.value of raw material volume is limited of 1.5second of water volume For example) When the 6.5 second of water volume is limited of 4.5 second of material volume.

Precaution

9

- Please attention used to "Water volume adjustment valve" because this be caused by drop the quality of accumulation etc..
- · Adjust the volume of water with volume adjustment valve.
- The volume adjustment valves are in the right and left sides of the built-in water tank in the product.
- Turn it left to decrease water volume and turn it right to increase water volume.

How to adjust the temporary taste control of the front door

Set the Enable /Disable switch in the control box inside the door to Enable



Amount indicator

Press the "MODE" button TWO times of the front door.



Amount indicator t0.2

Press ("▲" "▼")the UP,DOWN button at the right of MENU button on the front door. (When the press UP button 2times)

The drink volume can be control from Min. t0.1 to Max t0.5



Amount indicator t0.4

When finish setting price, please return to "Disable" from "Enable" inside the machine. Be keeping your changed numerical value with "beep sound"



How to adjust the temporary taste control function Enable & Disable of the front door

Set the Enable /Disable switch in the control box inside the door to Enable



Amount indicator ---

Press the "MODE" button THREE times of the front door. At this time is displayed the setting value.



Amount indicator **ENA**

Press ("▲" "▼")the UP,DOWN button at the right of MENU button on the front door.

- *dls :Disable of temporary taste control function
- *EnA: Enable of temporary taste control function



Amount indicator dIS



When finish setting price, please return to "Disable" from "Enable" inside the machine. Be keeping your changed numerical value with "beep sound"



How to set price

Set the Enable /Disable switch in the control box inside the door to Enable.



Amount indicator ---

Press the "MODE" button FOUR times of the front door. Press the menu button , the Vending price of tea1 ,tea2 & tea3 can be setting each menu.



Amount indicator | 000

- Press ("▲" "▼")the UP,DOWN button at the right of MENU button on the front door.
 - *The vending price setting can be from 0 to 9piece coin.



Amount indicator 200

When finish setting price, please return to "Disable" from "Enable" inside the door. Be keeping your changed numerical value with "beep sound"



How to check your selling cups

The function for My cup

Set the Enable /Disable switch in the control box inside the door to Enable.



Amount indicator ---

Set the Enable /Disable switch in the control box inside the door to Enable.



Amount indicator ---

Press the "MODE" button FIVE times of the front door.



Amount indicator AC1

Press the "MODE" button SIX times of the front door.



Amount indicator AC1

Press the drink menu button

- *When you press another Menu button, is displayed selling cups each menu.
- *Maximum display is to 999,999,999



Amount indicator 223

Press ("▲" "▼")the UP,DOWN button at the right of MENU button on the front door.

*AC1 : AUTOMATIC PAPER CUP DROP FUNCTION

"beep sound"

*AC2: INDIVIDUAL CUP FUNCTION (PAPER CUP IS NOT DROP)



Amount indicator AC2

When finish setting price, please return to "Disable" from "Enable"

Be keeping your changed numerical value with "beep sound"



When finish setting price, please return to "Disable" from "Enable"

Be keeping your changed numerical value with

 
Enable Disable

How to the adjustment of water temperature

Set the Enable /Disable switch in the control box inside the door to Enable.



Amount indicator [



*At this time is displayed the setting value of water temperature *You can adjust from 50°C to 98°C



Amount indicator 98c

- For example When you set up 96°C,
 - *Press the DOWN button "▼". TWO times of the front door. *When the temperature up, Please Press UP button"▲".



Amount indicator 96c

- When finish setting price, please return to "Disable" from
 - Be keeping your changed numerical value with "beep sound"



How to the operation test

Set the Enable /Disable switch in the control box inside the door to Enable.



Amount indicator ---

Press the "MODE" button EIGHT times of the front door.



Amount indicator 1st

Press the Menu button one time long.



Amount indicator 223

All kinds of menu is operated 1times successively.



Amount indicator | 223

When finish setting price, please return to "Disable" from "Enable" Be keeping your changed numerical value with "beep sound"



How to the cleaning

*Be sure to turn off machine before cleaning.

Inside water tank

Remove fur stacked inside water tank with soft sponge.

Clean it over two times per one month



Canister

Rub it with soft sponge after soaking it in the water to make material become soft

- Reassemble it after drying the water completely.
- Clean it over once per one month




Draining gutter

After casting away the water, soap it into the water bowl and wash it with water.

- After removing water completely, place it back in the specified position.
- Make sure to insert
- Clean it once per one day.



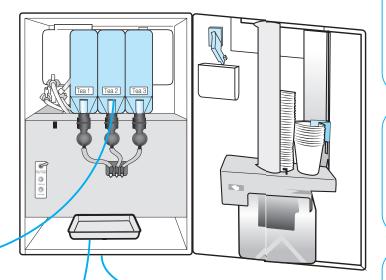

Mixing bowl

Wash it with soft sponge gourd after soaping it in the water to make hardened material become soft.

- After removing water completely, place it back in the specified position.
- · Clean it once per one day.



Cup outlet

Rub it with dried towel.

- · Remove the remaining water with dried towel.
- · Clean it once per one day.



Fan cover of damp-air ventilator

After removing the powder material and dust, clean it in the water and remove water.



Be sure to turn off machine remove the cover. it might cause injury.

 


Damp-air ventilating fan

Rub it with wet towel, after shaking of material powder and dust with a brush.





Be sure to turn off machine remove the cover. it might cause injury.



How to disassemble parts

• How to disassemble the mixing bowl

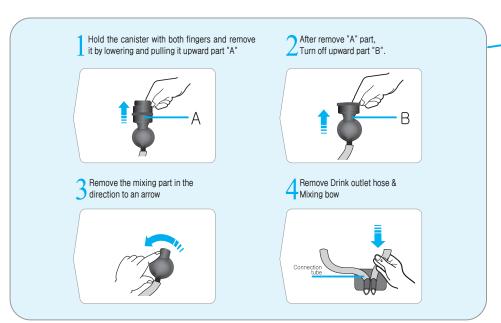


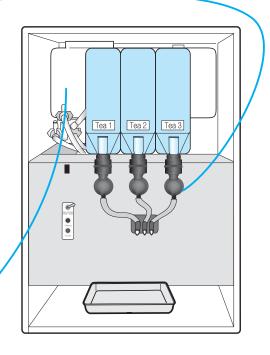


• How to disassemble the water tank

  
- Pull the draining hose of the rear side and remove the lid.
 - The water in the tank is drained completely.
 - Turn the power off after draining water.
 - · Be careful hot water.
- Disconnect the rear side cover with + type screw driver.







 Loosen screws on the rear panel and push the water tank and then, disconnector and pull it out.



How to disassemble fan cover of damp – Air ventilator (bottom of the rear panel)

Please press a head of on pressing "A"

- While the damp air inside the product goes out through the damp air ventilator the moisture and dust materials may be mixed and it makes them contaminate.
- So disassemble and clean the fan cover and the ventilating fan.



Be sure to turn off machine remove the cover. it might cause injury.



How to replace fuse

When excessive current flows, a fuse will be broken to cut off the power supply.

When a fuse is broken, put new fuse in (Same spec. one with spare fuse only.) and replace the broken one with the new one. **Fuse is not a item of the after sales service.

Replace fuse

When replacing fuse, must be disconnecet disconnect the power plug.



Remove the broken fuse and insert the new one.



Open the fuse holder



Close the fuse holder.



Specification

Model	DG-108F3M	
Power supply	220(110)V 50/60Hz(Export standard spec. is negotiable)	
Consumption power	818W	
Overheating prevention function	Bimetal system(Turn off to 115℃)	
Boiler tank	1,600ml	
Built in Water tank	4,500ml	
Coin Mechanism	Option	
Raw material canister	3 Kinds (Tea 1, Tea2, Tea3)	
Indication System	LED & FND	
Control system	MICOM(8K/B Micro Control System)	
Net Weight	22kg	
Gross Weight	24kg	
Dimension	650(H) X 450(W) X 490(D)mm	

MEMO-